


# DETONATOR

## Marui M&P9 Series Slide Parts Installation Manual

### Parts List

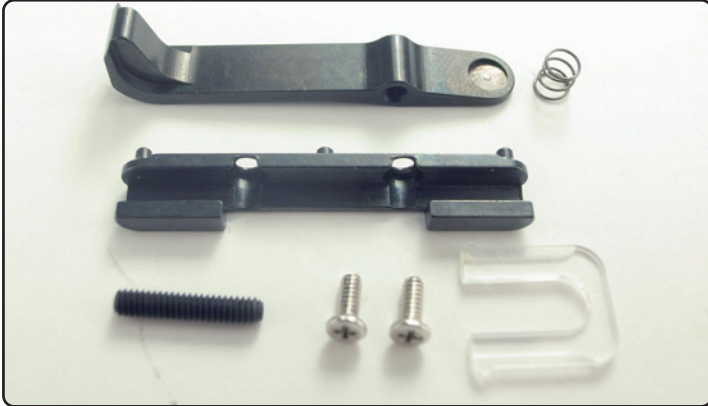

- A, Extractor Screw \*1
- B, Front Sight Spacer \*1
- C, Extractor Spring \*1
- D, M2.6X8 Screw \*2
- E, Slide Release Notch Enhanced Part \*1
- F, Extractor \*1

\*You may find more quantity for each part than needed.  
Only the above quantity are used for installation.  
Keep the extra for spare.


### 1: Extractor





Put Extractor Spring (C) into extractor as show in above.



Then put it into extractor space in slide, fix it with Screw (A).  
Therefore this extractor are movable.

 The extractor would NOT be functional at all when you screw it in tight.  
Tightly-fixed extractor prevent loading nozzle from working well.

### 2: Front Sight

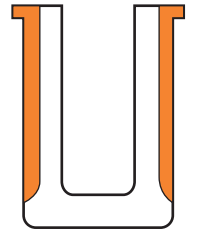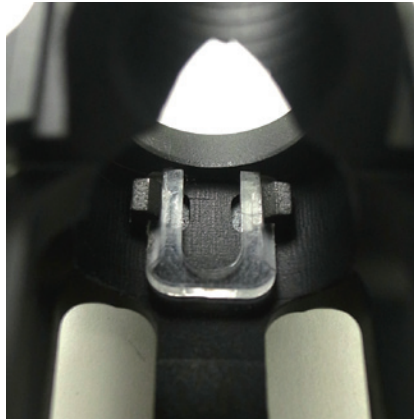

Part (B) is the one to fix front sight.

You find level difference on the edge of Part (B) as shown in orange above.

The Part (B) is inserted into the feet of front sight as the picture shows.

### 3: Slide Release



Slide Release Notch Enhanced Part (E) is screwed to fix by 2pcs of Screw (D). It is better to use screw locking glue as it may effect the performance when these screws get loosened.

2014/Sep./09