 



# Manual for installation of Detonator M&P9L Performance Center Slide

## Parts List

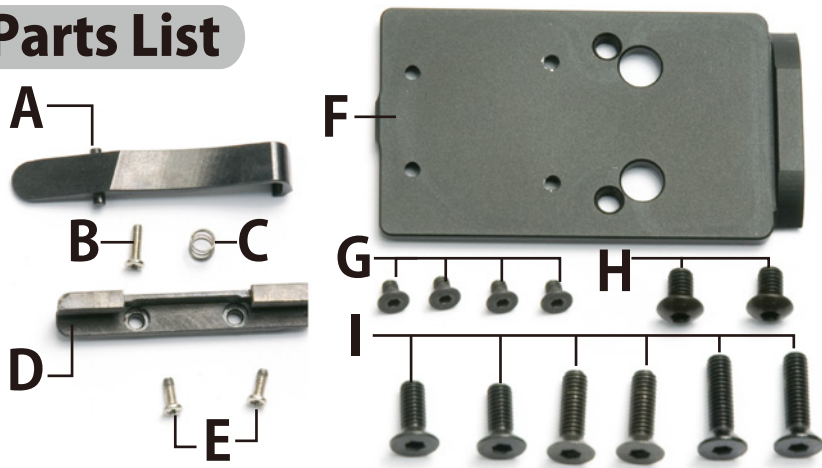


- A: Extractor \*1
  - B: M1.3 X5 Screw \*1
  - C: Extractor Spring \*1
  - D: Slide Release Notch Part \*1
  - E: M1.3 X3.5 Screw \*2
  - F: RMR Dot Sight Plate \*1
  - G: Screw \*4
  - H: Screw \*2
  - I: 3 size of Dot Sight Fix Screw \*2
- ※You may find more quantity of screws than needed. The surplus is spare.
 
## ① Extractor

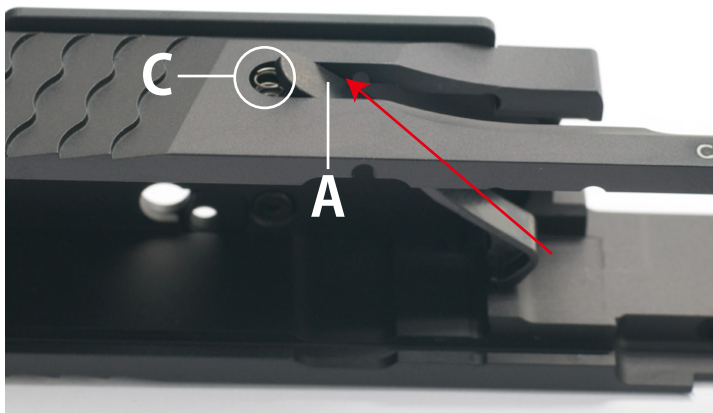


 Place extractor spring (C) on hollow of slide. Insert extractor from inside of slide.

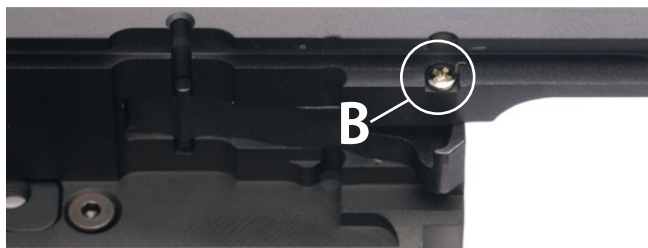

Fix extractor by screw (B). It may effect blowback function if this screw get loose. Advise you to use glue to fix screw.

## ② Slide Release Notch

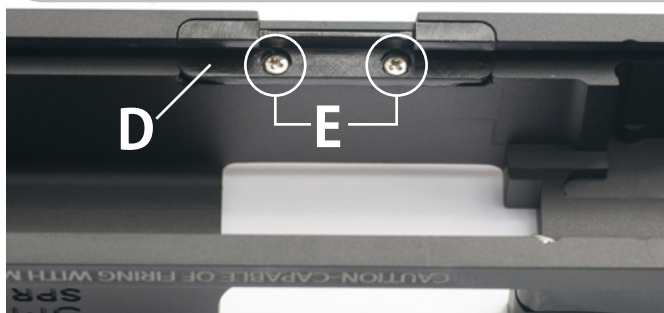 


Insert slide release notch part (D) into slide, and fix it by 2 screws (E). It may effect blowback function if this screw get loose. Advise you to use glue to fix screw.

## Install RMR Dot Sight



 Put intrusion of RMR Dot Sight Plate (F) into slide (red circled), then set the plate on slide.

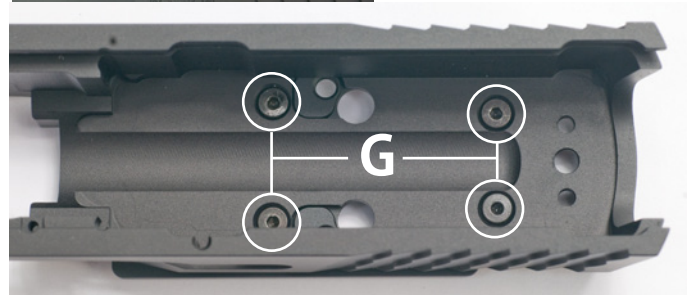

Fix the plate by 4 screws (G) from inside.

### Attention!!

3 size of Dot Sight Fix Screw (I) are prepared. Choose suitable one for your RMR dot sight. If dot sight fix screws touch blowback housing and find blowback performance not good, grind screw to adjust screw length.

## Install Marui Original Slide Cover

Put Marui slide cover directly onto slide and fix by 2 screws (H). Do NOT use dot sight plate (F). Marui original screw for slide cover can be used.

## Mount Marui Micro Pro Sight

Put Marui original dot sight mount plate on slide. Then mount Micro Pro Sight on it and fix by 2 screws (H). Do NOT use dot sight plate (F). Marui original screw for slide cover can be used.