

## DETONATOR SFA XD(M) 4.5/3.8 Custom Slide Installation Manual



Slide Release Spacer


Install slide release spacer after installing blowback housing. It is fixed by one pc of screw.

Slide Guide

Install this part **before** installing blowback Housing. Slide Guide is fixed by blowback Housing.

## DETONATOR SFA XD(M)3.8 Custom Slide Installation Manual


### How to use translucent part.

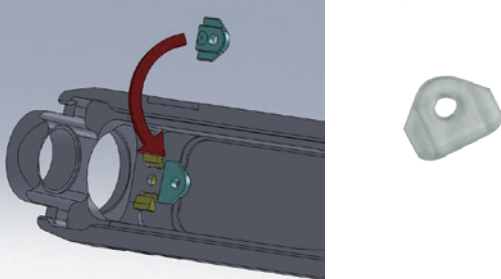

This part is used for fixing front sight. Put it in the direction which the above picture shows you.

### Outer Barrel:

You can find the top of chamber are scratched after shooting some rounds. This is caused by the shape of chamber. If you put spacer sticker in the space pointed by red circle, It cause less.

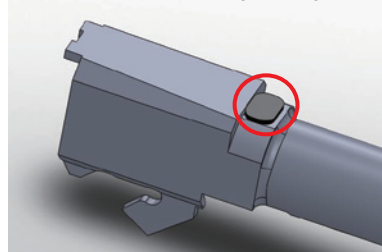

### Inner Barrel:

Inner barrel has to be cut at the point of 21cm from the muzzle of inner barrel. If you cut it longer than 21cm, you may meet malfunction.

\*Inner barrel for Glock 26 and Detonics is not long enough, therefore it may cause malfunction.

### How to install indicator assembly

#### “Install indicator assembly before install piston (XDM-7) into slide”

(It is very difficult to install indicator assembly after installing piston into slide)

- 1, After installing indicator pin (XDM-14) and indicator spring (XDM-04), hold indicator pin by needle nose plier. (Photo 1)
- 2, Put each part like Photo 2.

①



②

