



DETONATOR Marui HK45 Custom Slide Installation Manual

Parts List

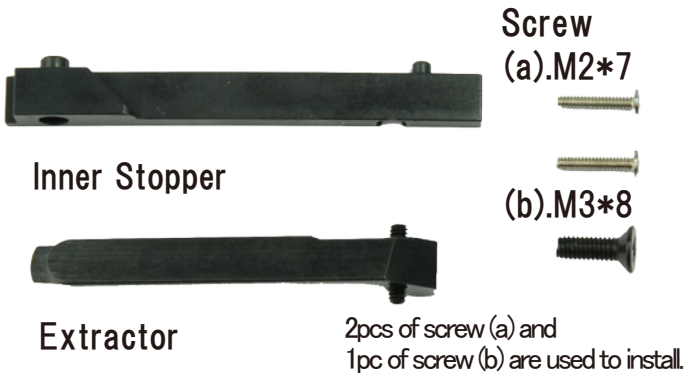

*You may find more screws than the above quantity. Those are the extra.

① Inner Stopper

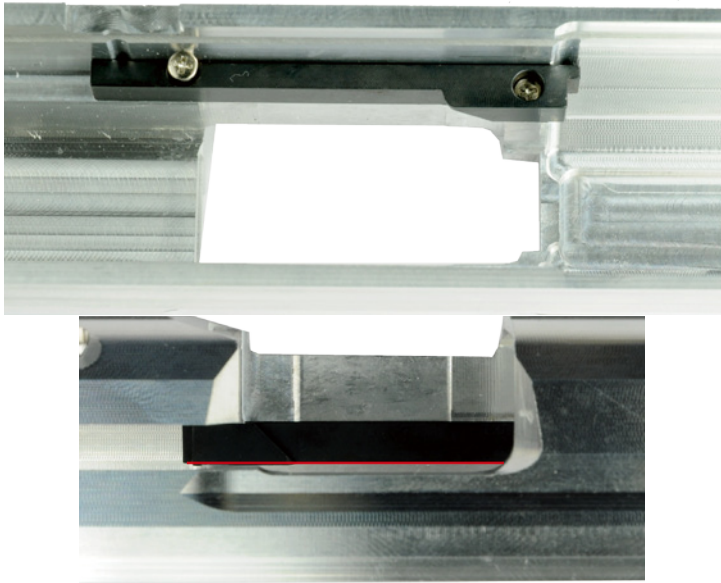

Screw up slide guide with screw (a).
Do NOT make space between slide and slide guide (Red line).

② Rear Sight

Use the Marui original rear sight and sight screw.

③ Front Sight

Use the Marui original front sight.
It is recommended to use plastic hammer because it is very hard to insert it onto slide.
Pay attention not to make scratch on slide.

④ Extractor




Extractor is placed to proper position.
(Screw-part comes to the front.)
You do not need to fix it by screw.
Blowback Housing can hold extractor.

⑤ Blowback Housing


Install blowback housing and screw it by screw (b).
The Marui original screw is not used.

Outer Barrel

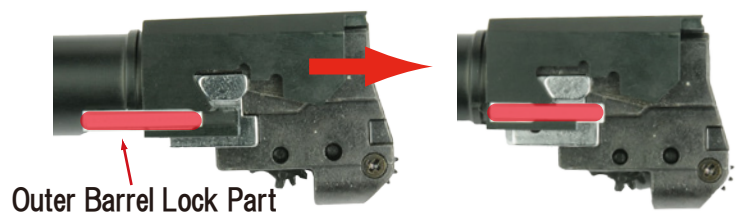

Outer Barrel Lock Part

Slide the outer barrel lock part (red line) into chamber after inner barrel are installed into outer barrel.
It is locked when the part is placed in proper position.
(You can feel the part fit into the place.)

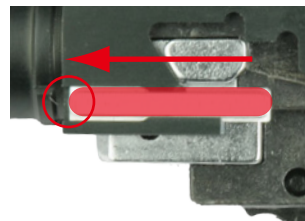

Remove inner barrel from outer barrel.

You make small space between chamber and the part by precise slotted driver. Then you can easily slide the part out.