


DETONATOR (For Tokyo Marui) H&K USP Compact Slide

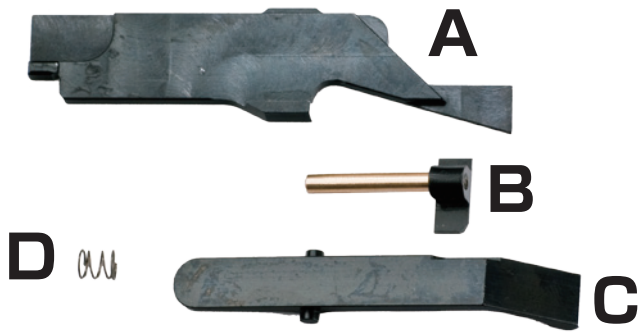

- A. Slide Stop Catch Plate
- B. Loading Nozzle Spring Plunger
- C. Extractor
- D. Extractor Spring

Slide Stop Catch Plate



Muzzle side

Install slide stop catch plate into the slide as show in above.

※Install it before installing blowback housing.

Loading Nozzle Spring Plunger



Install part B as show in above. Part B is tight because it need to fix into blowback housing. Do not file part B and use plastic hammer to put it into blowback housing.

※This slide do not use the original loading nozzle spring plunger.

Extractor



Put Part D on the slide as show in above
※ Part D do not need glue because it infix by extractor.



Install extractor as show in above.

Install blowback housing and extractor will be fixed.

※Install rear sight before installing blowback housing.

